

 WHITE GOODS	BUILT IN FREEZER 1650	CUSTOMER SUPPORT
	ASSEMBLE & DISASSEMBLE	

Changing The Door Swing Direction to Right Hand

1- Unscrew the two screws fixing the top hinge (Fig-1) and bottom hinge. (Fig-2)
Remove the door. (Fig-1)



Figure 1



Figure 2

2- Remove the top hinge screw caps (big) on the left side (Fig-3) and insert them to the right side. (Fig-4)



Figure 3



Figure 4



Figure 5

3- Remove the bottom hinge screw caps (big) on the left side and insert them to the right side. (Fig-5)

 WHITE GOODS	BUILT IN FREEZER 1650	CUSTOMER SUPPORT
	ASSEMBLE & DISASSEMBLE	

4- Assemble the top hinge to the bottom of the door (Fig-6) and assemble the door and then assemble the bottom hinge to the top of the door. (Fig-7)




Figure 6



Figure 7

 WHITE GOODS	BUILT IN FREEZER 1650	CUSTOMER SUPPORT
	THERMOSTAT SETTING	

BEFORE DATE 01 JULY 2013

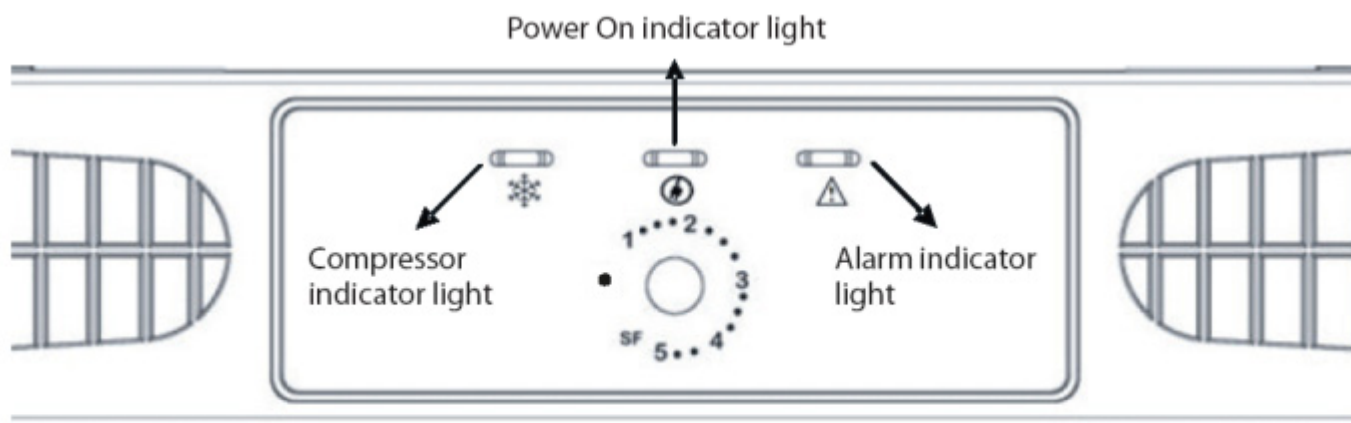

Freezer Thermostat Setting;

- : The appliance is closed
- 1-2: For short-term storage of food in the freezer compartment, you can set the knob between minimum and medium position.
- 3-4: For long-term storage of food in the freezer compartment, you can set knob to medium position.
- 4-5: For freezing the fresh food. The appliance will work longer. So after you get the cold condition you must position to previous position.

SF: Speed freeze function. The compressor starts running a maximum power. The temperature will decline to the lowest possible temperature. Insert the food you wish to freeze, ideally in the middle drawer. After freezing the food, set the temperature control knob to the required temperature.

NOTE:

If the SF function is activated the compressor indicator light will be lit orange and the compressor will start running at maximum power.

Do not forget, that the temperature inside the freezer compartment is also affected by ambient temperature, the temperature of the food placed inside and the number of times the door is opened. If required, change the temperature setting.


Compressor indicator light: If the compressor is turned on, it is lit orange.

Power On indicator light: As soon as the power cord of the appliance is connected to a power socket, it will be lit green.

Alarm indicator light: As soon as the temperature reaches a critical point, it will be lit red.

 WHITE GOODS	BUILT IN FREEZER 1650	CUSTOMER SUPPORT
	THERMOSTAT SETTING	

AFTER DATE 01 JULY 2013

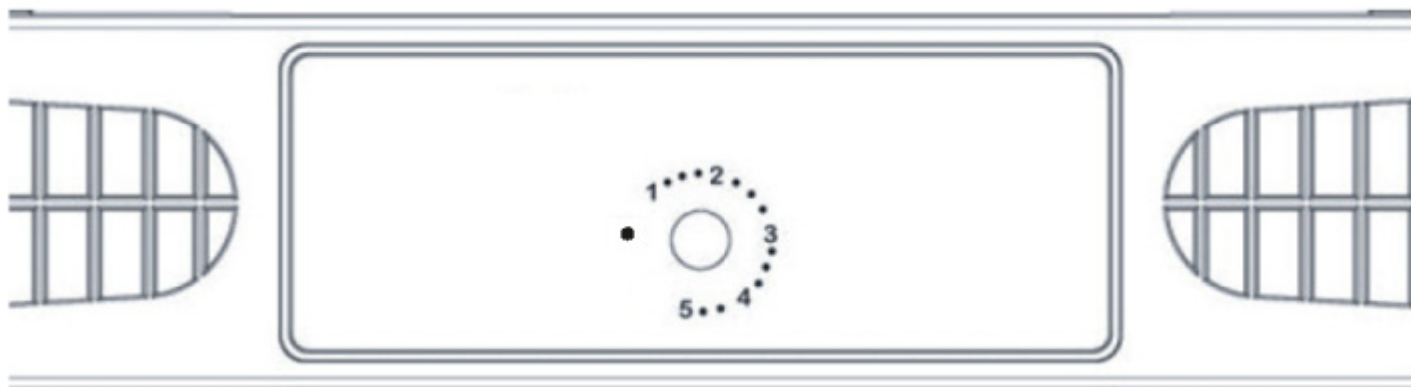

Freezer Thermostat Setting;

- : The appliance is closed
- 1-2:** For short-term storage of food in the freezer compartment, you can set the knob between minimum and medium position.
- 3-4:** For long-term storage of food in the freezer compartment, you can set knob to medium position.
- 4-5:** For freezing the fresh food. The appliance will work longer. So after you get the cold condition you must position to previous position.