



6 Operating Your Machine

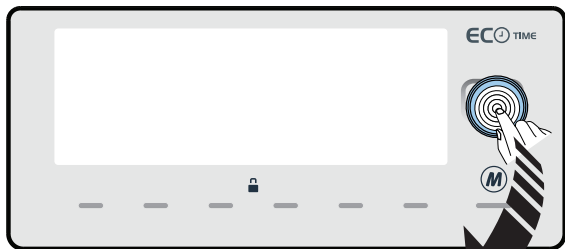

40°C
60°C

By pressing on Start/Pause button, you may start the programme you have selected, suspend a running programme.

7 Removing Laundry

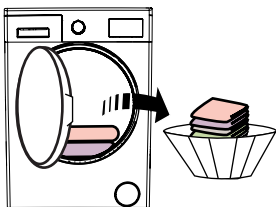

- After a program is completed, the washing machine will turn off automatically.
- "END" will appear on the display.
- Open the washing machine door and take the laundry out.

8 Maintenance


- 1- It is recommended that you clean your pump filter once in 2 months.
- 2- It is recommended that you clean your detergent drawer once in 2 months.
- 3- It is recommended that you clean your the filters on water inlet valves once in 2 months.
- 4- Clean the filter every 2 months at the end of the valves.



If the spinning operation is not performed or runs late, it means, the unbalance load control system has been activated. Unbalance load control system will try to spread your laundries homogeneously. Spinning operation will start after spreading your laundries.

QUICK USER MANUAL

DESCRIPTION OF THE MACHINE

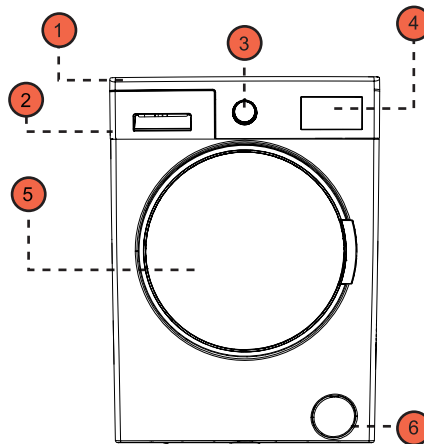


- 1- Upper tray
- 2- Detergent drawer
- 3- Programme knob
- 4- Electronic display
- 5- Door
- 6- Cover of pump filter

WASHING


- Connect the washing machine to a power socket.
- Open the water tap.

1 Separating Laundries

Separate your laundries according to their types (cotton, synthetic, sensitive, woollen, etc.), their temperatures (cold, 30°, 40°, 60°, 90°) and degree of contamination (slightly stained, stained, highly stained).

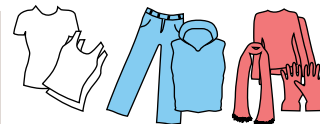


2 Placing Laundry Into The Washing Machine

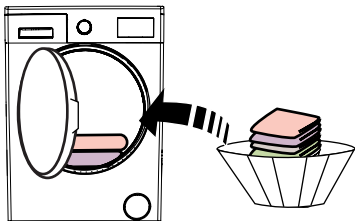

- Open the door of your machine.
- Spread your laundries in your machine.

3 Putting Detergent Into The Washing Machine

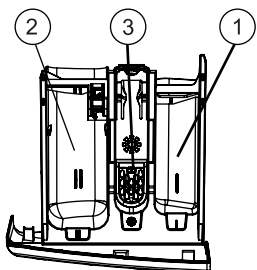


- 1- Pre- washing compartment
- 2- Main washing compartment
- 3- Softener compartment

4 Selecting Of Programme



- You can select the programme you want to wash your laundry in through programme knob.
- You may set the programme selection operation by rotating the programme knob in both directions.
- Ensure that the programme knob is exactly on the programme you want to select.

5 Electronic Display

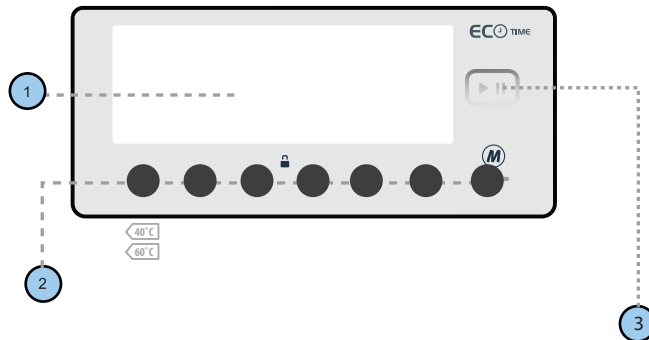


1- Info Screen: In this screen, you can see the features of the washing programs you selected and also have information about machine's status.


2- Adjustment and additional control buttons: The buttons on your machine are touch-sensitive. You may just touch them to make a selection.

3-Start/Stand-by button: You can start your machine and take it to stand-by with this button.

You can choose to add an additional function to your wash program, if available.

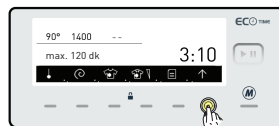

- Touch the symbol button to go into the auxiliary function indicator.

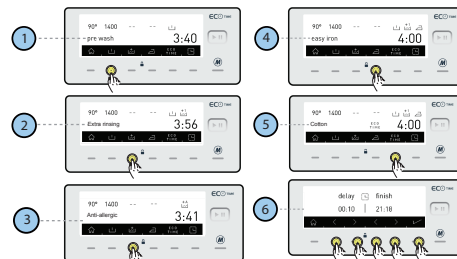

- 1- Prewash additional function
- 2- Extra rinse additional function
- 3- Anti-allergic additional function
- 4- Easy Ironing additional function
- 5- Eco Time additional function
- 6- Delay Timer additional function